

HOW TO INSTALL YOUR BIO-STIC

Bio-Stic's are good for approximately 1 year

Step 1

Remove one green cap, and fill the green clear container until our Bio-Stic floats .




Step 2

Wait 2 - 3 minutes for your Bio-stic to sink to the bottom. Once it has sunk, it is prepped and ready to be REMOVED from it's clear container.



Step 3

Remove the toilet bowl resevoir lid and TRANSFER your prepped Bio-stic from it's plastic container to the rear corner of your resevoir.

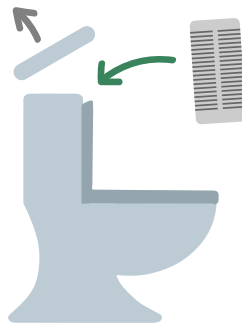

Notes

For single packs, select the toilet furthest from the septic/mainline.

Toilet water will have a brown tint for 3 - 4 days or less. This is normal. Bio-stic is just doing it's JOB!

Bio-Stic 

Sean Casaus
505-392-8696
sean@bio-stic.com